

POWERFLEX®

PART NUMBER

PFF25-1101

DESCRIPTION

FRONT WISHBONE FRONT BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 2 x Polyurethane A Bushes
- 1 x PTFE/Silicone Grease
- 2 x Polyurethane B Bushes
- 2 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original bush and clean away any dirt and corrosion, remembering to also file away any sharp edges.
2. Insert Polyurethane bushes A and B into the bore of the arm, taking note of the orientation shown in Figure 1. Polyurethane Bush A (smaller top hat) sits on the outside of the bore, so it is facing the front of the car.
3. Apply some of the supplied grease to the outer surface of the Stainless Steel Sleeve, and insert it into the bore of the Polyurethane Bushes, ensuring it sits flush.
4. Refit the arm and tension all hardware to the manufacturer's torque settings

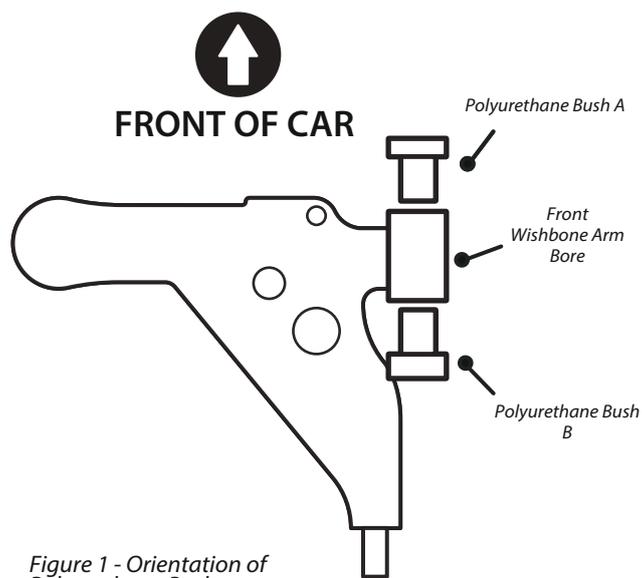


Figure 1 - Orientation of Polyurethane Bushes

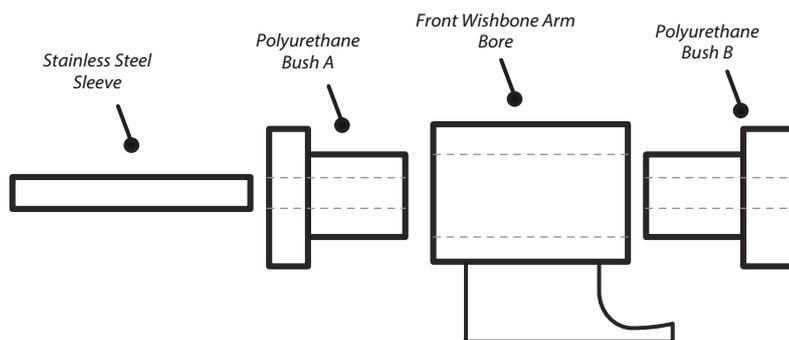


Figure 2- Assembly