

# POWERFLEX®

PART NUMBER

## PFF25-302G

DESCRIPTION

### FRONT REAR ARM CAMBER ADJUSTABLE

## INSTALLATION GUIDE

### Contents (parts per pack):

- 2 x Polyurethane A Bushes
- 1 x PTFE/Silicone Grease
- 2 x Polyurethane B Bushes
- 2 x Stainless Steel Sleeves
- 1 x C45 Spanner

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



### Fitting Instructions:

1. Remove the front wishbone from the vehicle and press out the original rubber bushes
2. Clean off any dirt and corrosion from the vacant hole and remove any sharp edges using a rounded file
3. Push the bushes into the wishbone with the thicker 25-302A bush facing towards the rear of the vehicle and the thinner 25-302GB bush to the opposing side, facing towards the front.
4. Apply the supplied grease to the bore and end faces of the bush and press in the stainless steel sleeve with the adjustable knurled end of the bush facing towards the front of the vehicle.
5. Refit the wishbone to the vehicle, tighten all bolts to the manufacturers torque settings and carry out a full wheel alignment check.
6. To adjust the bushes on the vehicle, loosen the mounting bolt and rotate the sleeve using the supplied C-Spanner. Set the hole positions pointing towards the middle of the vehicle for maximum negative camber offset.
7. Test drive, and enjoy!

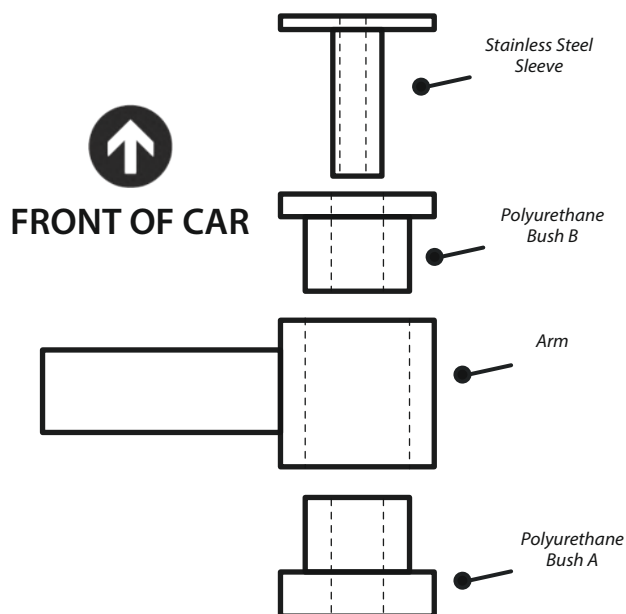


Figure 1

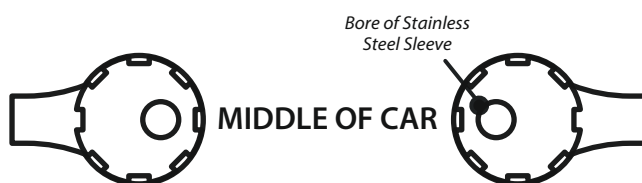


Figure 2- Adjustment of camber, showing maximum camber settings