

POWERFLEX®

PART NUMBER

PFF25-802

DESCRIPTION

FRONT WISHBONE REAR BUSH

INSTALLATION GUIDE

Contents (parts per pack):

2 x Polyurethane A Bushes 1 x PTFE/Silicone Grease
2 x Polyurethane B Bushes


Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*
- All fasteners must be tensioned to manufacturer's torque settings.*

Fitting Instructions:

1. Remove the front wishbone arm from the vehicle and separate the rear bush bracket from the arm.
2. Remove the original rubber bush from the bracket.
3. Clean any dirt and corrosion off the spigot and the inner bore of the bracket.
4. Fit polyurethane part B onto the spigot, with the lip of the bush being pushed in first. **Make sure to align the slots in the bore of the part B with the casting line on the arm, as shown in Figure 1.**
5. Fit polyurethane part A in the bracket, with the chamfered edge of the bush being pushed in towards the back of the vehicle.
6. Apply some of the supplied grease into the bore of part A and fit the assembled bracket onto part B on the spigot.
7. Refit the front wishbone arm back to the vehicle and tension all hardware to manufacturers recommended torque settings.

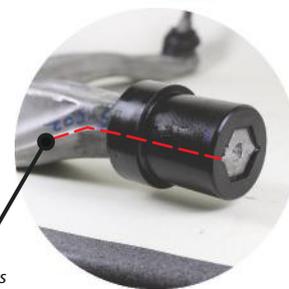

Align the slots with the casting line on arm

Figure 1

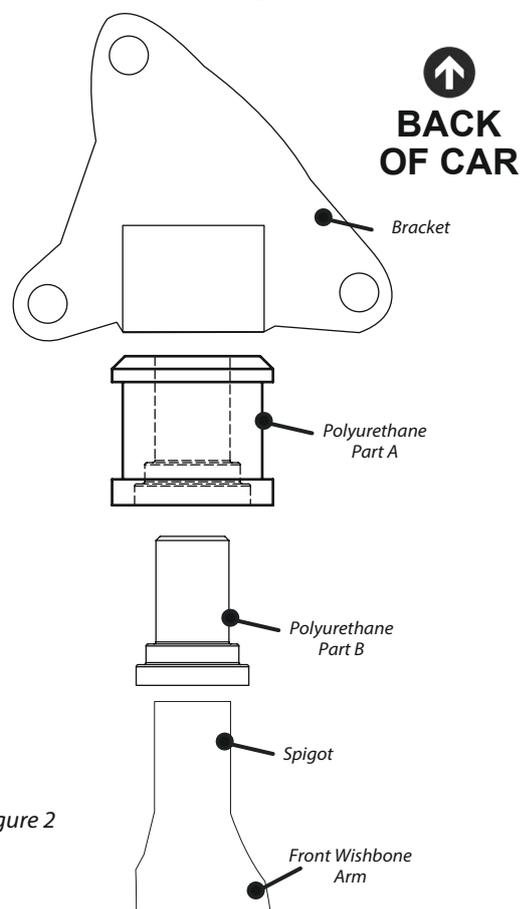


Figure 2