

POWERFLEX®

PART NUMBER

PFF73-401G

DESCRIPTION

FRONT ARM FRONT BUSH - CAMBER ADJUST

INSTALLATION GUIDE

Product description:

PFF73-401G Offers on car camber adjustment of +/- .75 degrees

Contents (parts per pack):

- 4 x bushes (2 x A & 2 x B parts)
- 2 x stainless steel adjustable sleeves
- 2 x nylon washers
- 1 x grease



Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.



It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.

All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove arm from the car, remove the front bush from the arm, clean any dirt and rust from the hole.
2. Fit the A bush (thicker larger diameter) in from the rear and the B bush (narrow larger diameter) in from the front.
3. Apply some of the supplied grease to the bore of the bush and both faces of the nylon washer. Place the washer over the sleeve then push the sleeve in from the front, into the B bush first.
4. Turn the sleeve to maximum camber as a starting point. Refit the arm to the car.
5. Drive the car to settle the suspension and adjust the geometry to your required setting.

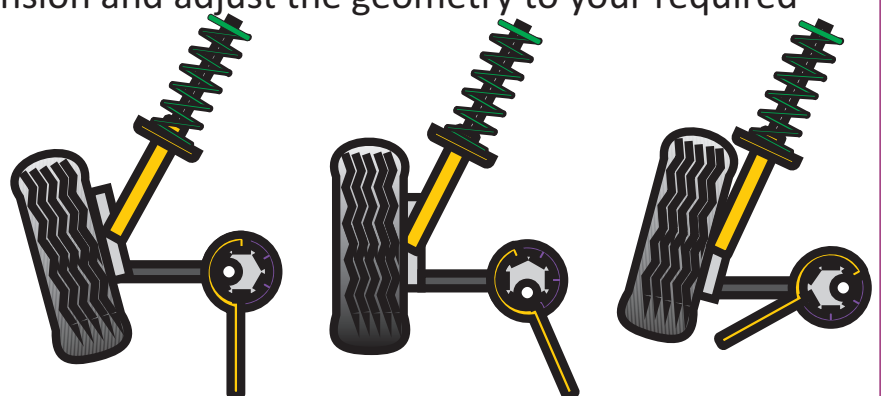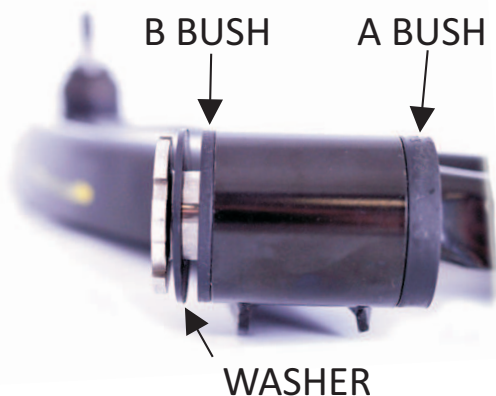

Positive

Neutral

Negative

Camber Adjustment Positions