

POWERFLEX®

PART NUMBER

PFR85-1330

DESCRIPTION

Rear Lower Spring Seat Isolator

INSTALLATION GUIDE

Contents (parts per pack):

2 x Powerflex PFR85-1330 Spring Pads

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Raise the vehicle on a workshop lift or with a trolley jack and support on axle stands.
2. Remove the rear wheels to gain access to the rear arms.
3. Support the rear arms from underneath with a jack or transmission stand and remove the lower shock absorber bolt.
4. Lower the rear arm so that the spring can decompress and be removed, along with the rubber spring isolator.
5. Clean the arm and the spring of any dirt and corrosion.
6. Place the Powerflex spring isolator over the spigot of the arm.
7. Place the spring back into position and raise the arm until seated correctly in both the upper and lower positions.
8. Refit the lower shock absorber bolt, tensioning all hardware to the manufacturer's recommended torque settings



Figure 1



Figure 2

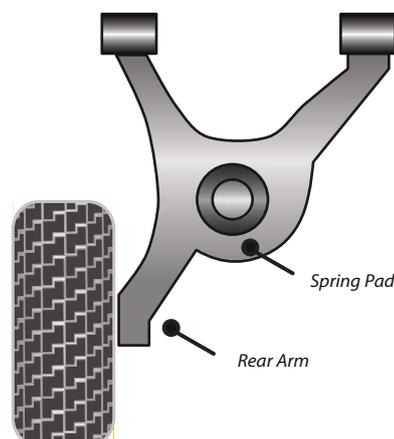


Figure 3