

Installation instructions

Akrapovič Exhaust System:

Slip-On

ABARTH 500 ABARTH 500C



Installation instructions

Akrapovič Exhaust System:

Slip-On for the

ABARTH 500 ABARTH 500C Congratulations on purchasing an Akrapovič exhaust system. Please read the entire installation manual prior to undertaking any activities related to installation of your new Akrapovič exhaust system. In case you do not fully understand the manual or any of its parts, please contact your authorized dealer!

This product should be <u>installed by someone with sufficient knowledge</u> of exhaust systems and their installation, and appropriate hand or power tools. If you are not qualified for this work, please utilize a certified mechanic for installation. By installing Your Akrapovič exhaust system, you indicate that you have read the installation manual in its entirety and you agree with the terms stated herein.

It is your responsibility to <u>follow all installation instruction guidelines</u> supplied with the Akrapovič exhaust system and undertake all necessary safety precautions. Akrapovič d.d. assumes no responsibility for damages occurring from misuse, abuse, improper installation, improper operation, lack of responsible care, or all previously stated reasons resulting from incompatibility with other manufacturer's products and/or systems.

IMPORTANT INFORMATION

Exclusion of Certain Liability

- The manufacturer, importer or dealer shall not be liable for any incidental damage including
 personal injury or any other damages caused by improper installation or operation of the
 Akrapovič exhaust system. When installing the Akrapovič exhaust system be careful that the
 exhaust system does not touch other parts sensitive to high temperature.
- 2. Akrapovič makes no representation or warranties with regard to damage caused by the improper installation, use and maintenance of the Akrapovič exhaust system. The warranty is limited to defects recognized by our technical department and due to normal use, and excludes items subject to normal wear (gaskets and damping wool). The guarantee is void in case of accident, modification, improper or competition use.
- Do not attempt to install the Akrapovič exhaust system on a vehicle model for which it was not made or tested by Akrapovič.
- 4. When the exhaust system gets very hot during operation, be careful not to burn yourself on the exhaust system or parts which are in direct contact with it, even when the engine is not running. Also protect other people, especially children, from the injuries mentioned above.

- In some cases Akrapovič exhaust system kits contain chemical products (ceramic anti-seizing grease; bolt sealant). Handle with care, do not inhale or swallow. Avoid excessive contact with skin, eyes or mucous membranes. Keep out of reach of children.
- Technical specifications of Akrapovič exhaust systems and related products are subject to change without notice.
- 3. <u>Before removing the original exhaust system</u> from your vehicle, please compare the parts you received with the list of materials provided in the installation manual in order to assure that you have all the parts necessary for the installation of your new Akrapovič exhaust system.
- 4. Although this manual consists of instructions for installation in written form, as well as photographs and pictures representing individual steps of the installation, please note that the photographs and pictures are symbolic and are intended for representation of general overview only. The <u>photographs and pictures</u> contained herein should serve as a guideline only and actual installation of the exhaust system may not correspond with the photographs and pictures entirely.
- The process of uninstalling the original exhaust system may vary depending on the existing exhaust system. Please follow the original exhaust system manufacturer's instructions for uninstalling the original exhaust system.

Trademarks

The Akrapovič trademark, including corporate logos and emblems, are subject to copyright as well as trademark rights of Akrapovič, its licensors or third persons authorizing Akrapovič to use them.

Akrapovič website

Information about Akrapovič exhaust systems and related products is available on the Akrapovič website at:

http://www.akrapovic.com/

Copyright


No part of the Akrapovič exhaust system or its documentation may be reproduced or distributed in any form or by any means without the prior written authorization of the Akrapovič company.

© Akrapovič, d.d. All rights reserved.



Symbols

The following symbols are used throughout these installation instructions:

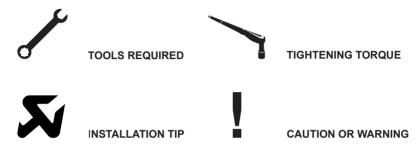



USE BOLT SEALANT; Apply 3 to 4 small drops of bolt sealant onto the cleaned and degreased threads before tightening the bolts. WARNING! Avoid contact with skin, eyes and mucous membranes. Do not inhale fumes. Keep out of the reach of children.



USE ANTI-SEIZE LEAD-FREE COPPER PASTE (black tube); Provides trouble-free and long-lasting protection against seizing, corrosion and rusting of bolts, threaded ends, nuts, joints, etc. Also protects against vibration, wear and impact. WARNING! Avoid eye contact. Avoid excessive skin contact. Keep out of reach of children.



USE ANTI-SEIZING GREASE (white tube); Prevents seizing, corrosion and excessive wear between the titanium components of your exhaust system. WARNING! Avoid eye contact. Avoid excessive skin contact. Keep out of reach of children.



Hexagon socket 13mm
Hexagon socket 15mm
Hexagon socket 17mm
T-handle swiveling 10mm wrench
T-handle 7mm wrench
Cutting nippers
Pry bar



BEFORE INSTALLING, CHECK SCHEMATIC OF THE EXHAUST SYSTEM! THE LATEST VERSION OF THE PARTS LIST AND SCHEMATIC DRAWINGS OF THE PRODUCTS ARE AVAILABLE ON OUR WEB PAGE.



IF ANY ITEMS IN THE AKRAPOVIČ EXHAUST SYSTEM PACKAGE ARE MISSING, PLEASE CONTACT YOUR AUTHORIZED DEALER. KEEP THE SCHEMATIC FOR FUTURE REFERENCE.



THESE INSTALLATION INSTRUCTIONS MUST BE READ CAREFULLY IN ORDER TO ENSURE PROPER INSTALLATION AND OPERATION OF THE AKRAPOVIČ EXHAUST SYSTEM.



THE EXHAUST SYSTEM CAN BE EXTREMELY HOT. ALLOW THE EXHAUST AND ENGINE TO COOL DOWN BEFORE BEGINNING INSTALLATION.



WE ADVISE YOU TO LEAVE INSTALLATION TO A QUALIFIED SERVICEMAN. IMPROPER INSTALLATION MAY RESULT IN A SHORTER LIFETIME OF THE EXHAUST SYSTEM AND/OR DAMAGE TO THE VEHICLE.



THIS MANUAL IS SPECIFIC TO THE ABARTH 500. THERE MAY BE SOME DIFFERENCES IN INSTALLATION PROCEDURES FOR OTHER MODELS.




AT EACH ENGINE START, THE EXUP VALVE MAY VIBRATE FOR A FEW SECONDS UNTIL THE VACUUM SYSTEM REACHES OPERATING PRESSURE.




REMOVAL OF ORIGINAL EXHAUST SYSTEM:

Put the vehicle onto a car lift.

- ! WARNING: ensure that the car is lifted safely and properly in order to avoid the risk of vehicle damage, injury, or even death!
- 1. Untighten the marked original clamp (Figure 1).

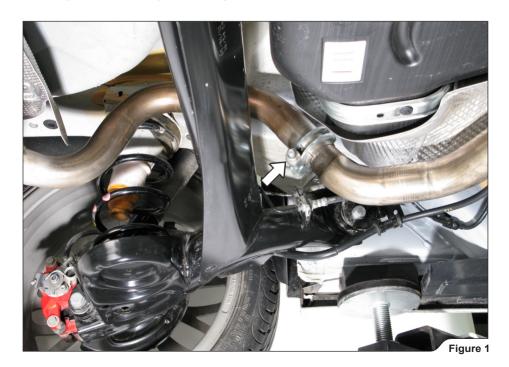

- 2. Carefully pull the rubber brackets off the muffler's brackets, using flat pry bar and remove the original muffler off the vehicle (Figure 2, 3).
- INSTALLATION TIP: for easier dismounting, disassemble the rear wheels.
- INSTALLATION TIP: for easier dismounting, lubricate the original rubber brackets (WD40).
- ! WARNING: make sure, that you support the original muffler during this process or you could injure yourself or damage the vehicle!

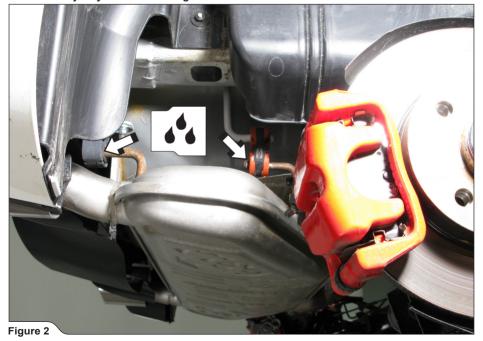


WARNING: make sure, not to damage the rubber brackets or any other part of the vehicle during this process!




INSTALLATION OF THE AKRAPOVIČ EXHAUST SYSTEM:

- Assemble the clamps and link pipe onto the muffler's inlet pipes and original left rubber bracket onto the Akrapovič muffler's left bracket, as shown (Figure 4).
- WARNING: use anti-seize copper paste on all clamps' bolt threads!
- ! CAUTION: in case you choose to grind off the spot welds and brake the link pipe's seal off, the Akrapovič exhaust system EC Type approval is not valid!
- INSTALLATION TIP: for easier mounting, lubricate the original rubber bracket (WD40).

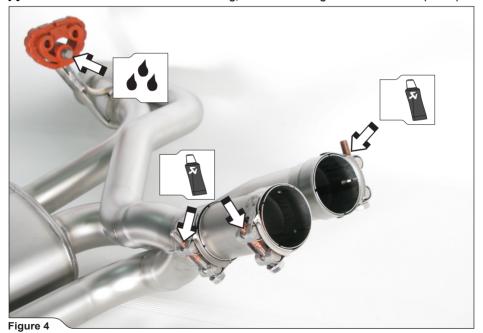

- For optional wireless kit only: assemble the clamps and link pipe with exhaust valve onto the muffler's inlet pipes and original left rubber bracket onto the Akrapovič muffler's left bracket, as shown (Figure 5).
- ! WARNING: use anti-seize copper paste on all clamps' bolt threads!
- INSTALLATION TIP: for easier mounting, lubricate the original rubber bracket (WD40).

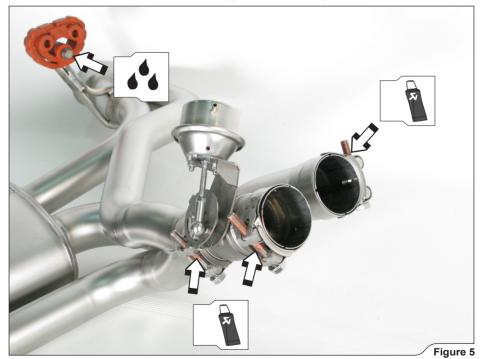

- 3. Fully unscrew the clamp's nut and assemble it onto the collector. Position the clamp exactly as shown (Figure 6).
 - WARNING: use anti-seize copper paste on clamps' bolt and nut threads!



- 4. Slide the collector onto the original pipe and hand tighten the clamp (Figure 7).
 - WARNING: do not fully tighten the clamp yet!




- 5. Carefully re-form the original aluminium heat shield as shown (Figure 8, 9).
 - ! WARNING: make sure not to crack or in any other way damage the heat shield!






- 6. Slide the muffler onto the collector and hang the muffler onto the original rubber brackets. Center the muffler in respect to the rear bumper's tail pipe outlets (**Figure 10**).
- INSTALLATION TIP: for easier mounting, lubricate the original rubber brackets (WD40).
- ! WARNING: make sure, that you support the muffler during this process or you could injure yourself or damage the vehicle!

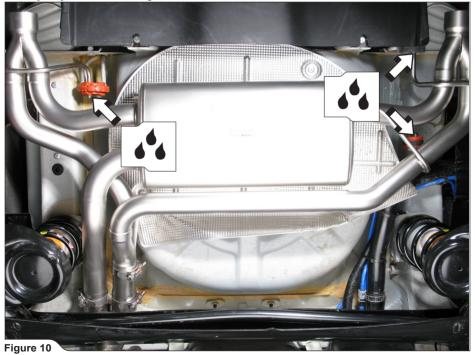


- 7. **For optional wireless kit only:** rotate the link pipe with exhaust valve and orient the clamps as shown (**Figure 11**).
 - WARNING: make sure, that exhaust valve doesn't touch any part of the exhaust system or the vehicle chassis!



8. For optional wireless kit only: tighten the clamps to the specified torques (Figure 12).

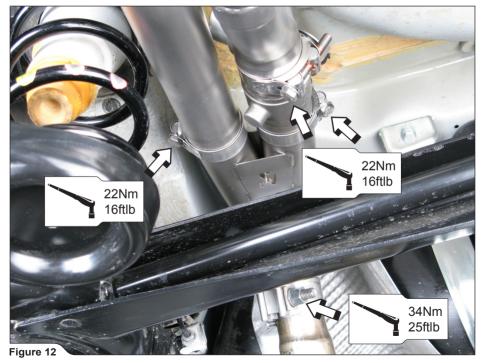

9. Orient the clamps as shown and tighten them to the specified torques (Figure 13).

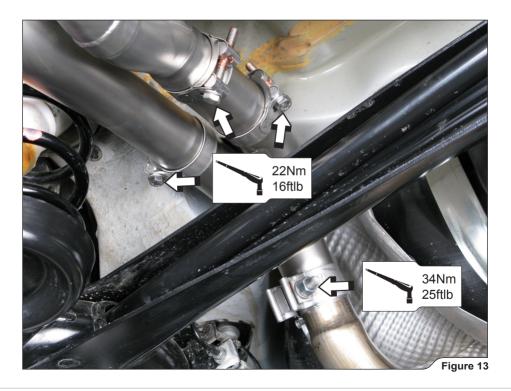


- 10. Assemble the clamps and spherical rings onto the tail pipes, as shown (Figure 14).
 - WARNING: use anti-seize copper paste on clamp bolt threads!



- 11. Slide the tail-pipes onto the muffler outlets. Rotate and center them in respect to rear bumper and according to your personal taste (Figure 15).
 - CAUTION: in case the tail pipes can't be centered in respect to the bumper's outlets, repeat the adjustment of original pipe-middle pipe-muffler inlet pipes joints (Figure 11).



12. Tighten tail pipe clamps to the specified torque on both sides and assemble the rear wheels back onto the vehicle (Figure 16).

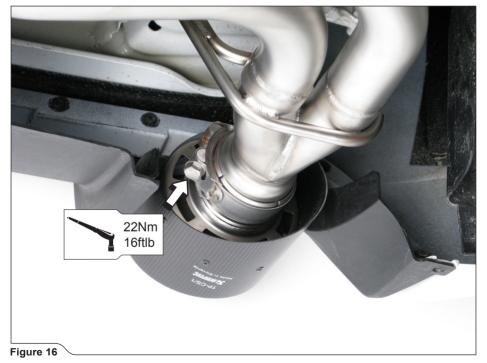

NAKRAPOVIČ


13. For optional wireless kit only: unscrew the marked bolts and remove the engine cover (Figure 17).




- 14. For optional wireless kit only: remove both fuse box covers (Figure 18).
- WARNING: make sure not to damage any part of the vehicle during this process!




15. For optional wireless kit only: remove the marked 7.5A fuse from F16 fuse spot (Figure 19).

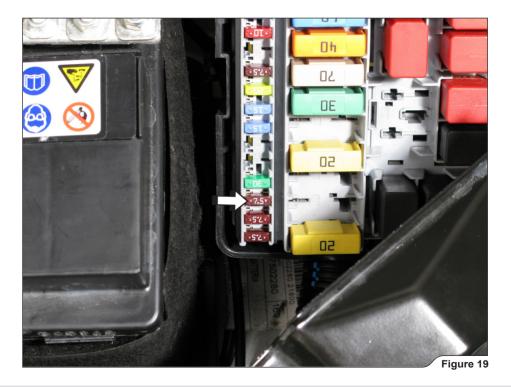


- 16. For optional wireless kit only: insert the 7.5A fuse into the transmitter's fuse connector (Figure 20).
 - CAUTION: in case of broken supplied fuse, use only automotive 2A and 7.5A small-blade fuses (Figure 20)!

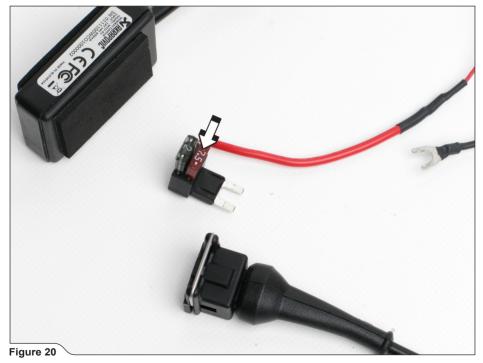

17. **For optional wireless kit only:** insert the transmitter's fuse connector into the F16 fuse spot, tuck the transmitter into the fuse box, tighten the ground connector (black thin wire) to the negative pole of the battery and secure the wires using tie wraps, as shown (**Figure 21**).

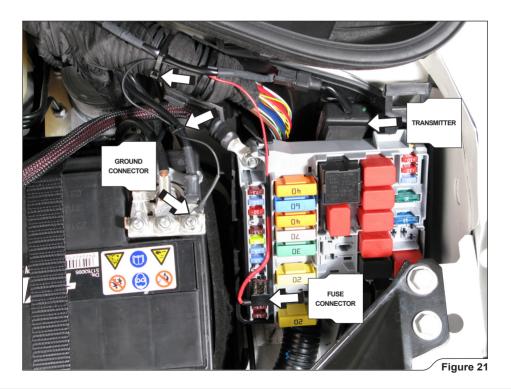


- 18. For optional wireless kit only: carefully pull the marked vacuum tube off the vacuum distributor (Figure 22).
 - WARNING: make sure not to damage any part of the vehicle during this process!

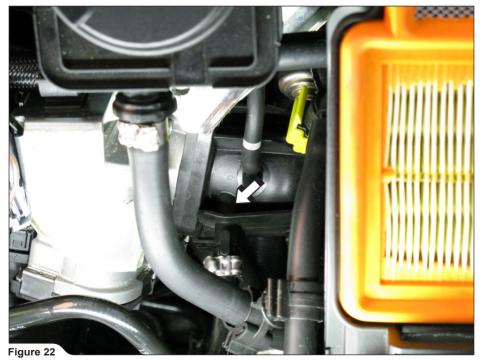


19. **For optional wireless kit only:** instal the Akrapovič electromagnetic valve assembly between the original vacuum tube and vacuum distributor, as shown **(Figure 23, 24)**.



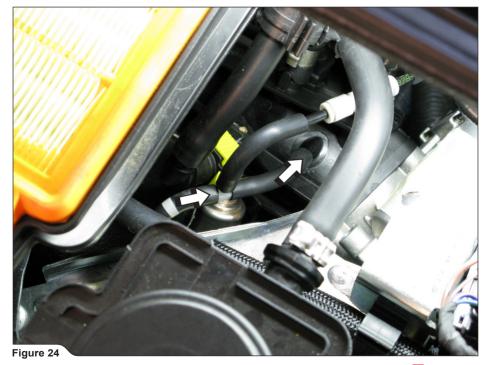




20. **For optional wireless kit only:** screw the electromagnetic valve's bracket onto the chassis, using marked original bolt **(Figure 25).**

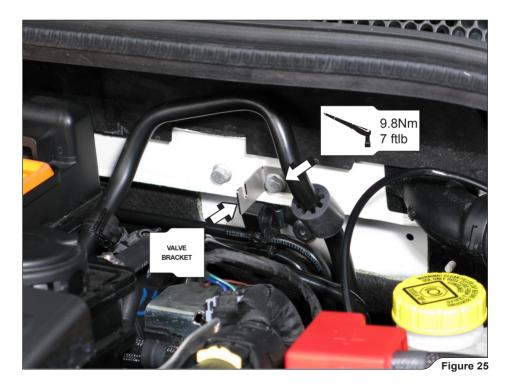

21. **For optional wireless kit only:** clip the electromagnetic valve onto the bracket and plug the transmitter's connector onto the valve **(Figure 26).**



22. For optional wireless kit only: grind the lower fuse box cover as shown (Figure 27).

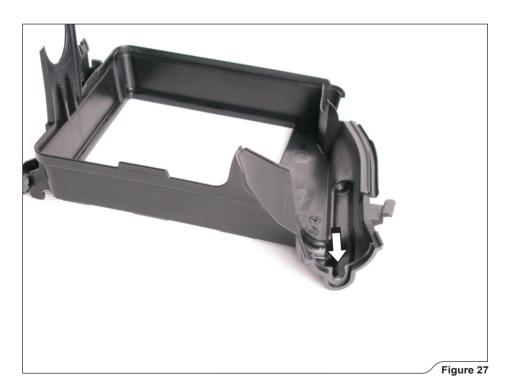


- 23. For optional wireless kit only: assemble both covers back onto the fuse box (Figure 28).
- ! WARNING: make sure not to damage any part of the vehicle or transmitter during this process!




24. For optional wireless kit only: reinstall the engine cover (Figure 29).



- 25. For optional wireless kit only: unscrew the marked bolts and nut. Remove the installations protection off the vehicle (Figure 30).
 - WARNING: make sure not to damage any part of the vehicle during this process!

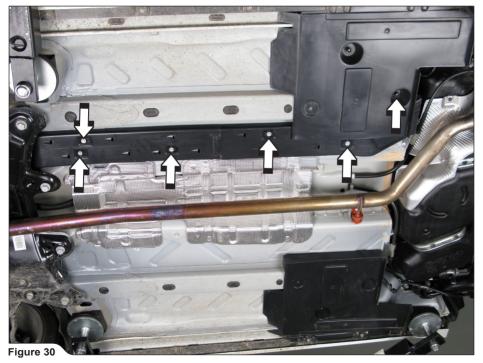


26. For optional wireless kit only: undo the two marked heat shield's clips (Figure 31).

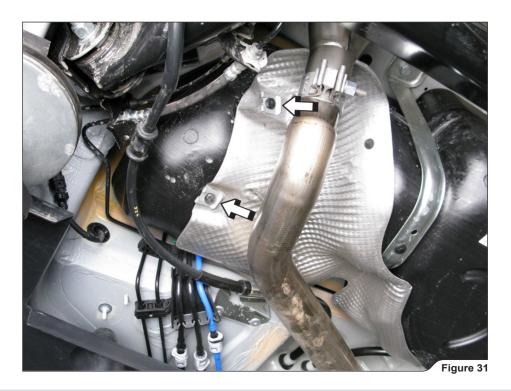


- 27. For optional wireless kit only: connect the Akrapovič rubber vacuum hose to the vacuum actuator and direct the hose to the electromagnetic valve in the engine compartment, as shown (Figure 32, 33, 34, 35, 36).
 - WARNING: direct the rubber vacuum hose in such a way, that it doesn't touch any hot or moving parts of the vehicle!




WARNING: direct the vacuum hose between fuel tank and heat shield (Figure 33)!

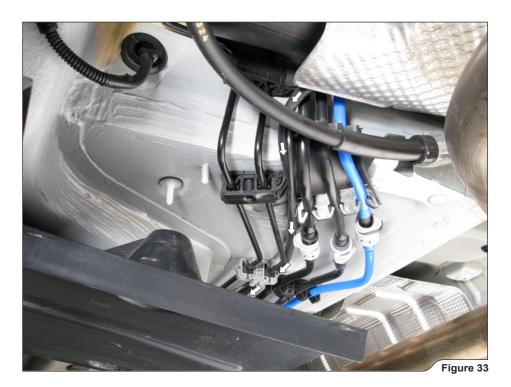

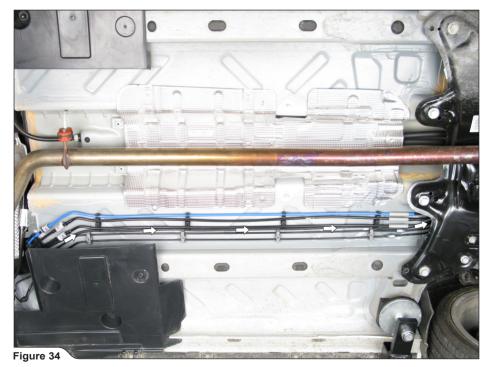




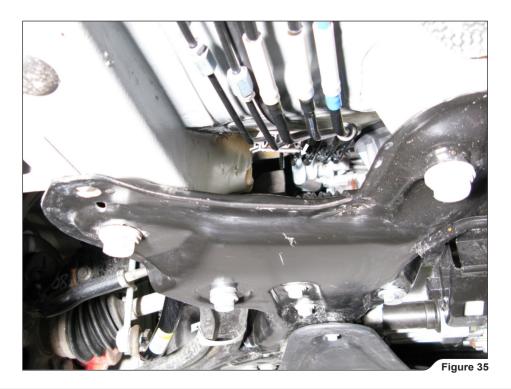


! CAUTION: secure (use additional plastic tie wrap) the rubber vacuum hose, as shown (Figure 36)!



28. For optional wireless kit only: reinstall the heat shield's clips and the installations protection (Figure 37, 38).

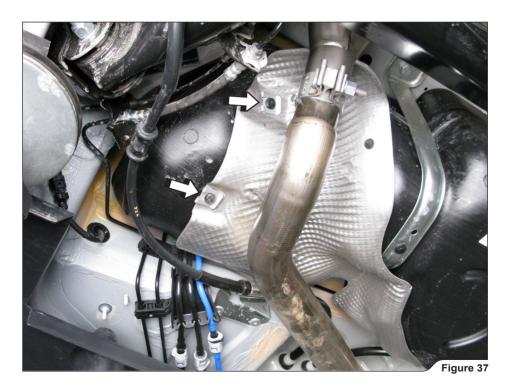

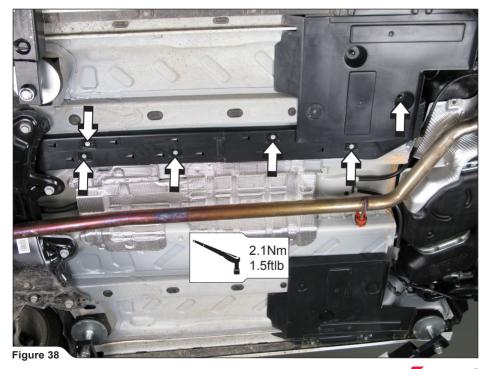



! CAUTION: secure all vacuum tubing connections, using clamps from Akrapovič installation kit! Install the clamps with corresponding tube clamp pliers (Figure 39).



Final installation:

- WARNING: check vehicle manufacturer manual for tightening torques (for dismounted stock parts)!
- ! WARNING: make sure all the nuts and bolts are sufficiently tightened. In case the exhaust system touches the cowling or other parts, repeat the adjustment of the exhaust system or contact your authorized dealer.

MAINTENANCE OF THE AKRAPOVIČ EXHAUST SYSTEM:

- Clean the titanium exhaust components with a multi-purpose spray lubricant (WD-40 or equivalent), carbon fiber exhaust components with soft and dry cloth and stainless steel components with soft cloth sprayed with contact cleaner, then wipe with soft and dry cloth. A change in the color of the exhaust system is normal due to high temperatures.
- 2. Periodically make sure all the bolts and springs are sufficiently tight.
 - WARNING: clean all exhaust components before the first start of the engine or the stains will burn onto the surfaces!
- ! IT IS NORMAL FOR WHITE SMOKE TO COME OUT OF THE MUFFLER AT FIRST OPERATION.
- ! DO NOT STAND BEHIND THE MUFFLER AT FIRST OPERATION.
- DO NOT USE AUTOMOTIVE WHEEL CLEANERS OR ANY CLEANING PRODUCTS WHICH CONTAIN ACIDIC ADDITIVES TO CLEAN THE AKRAPOVIČ EXHAUST SYSTEMS.



WARNING

Please note that certain aftermarket exhaust systems may not comply with applicable California laws and regulations, and may therefore be prohibited for use on California highways or roads, or on roads or vehicles otherwise subject to emissions control requirements.

Akrapovič exhaust systems for automobiles and motorcycles mounted downstream of the catalytic converter (also known as "cat-back systems") are considered "replacement parts" in California by the California Air Resources Board (CARB), and do not require an exemption or executive order from CARB to be sold in California. However, California prohibits the use of any aftermarket exhaust system that modifies, removes or replaces original equipment catalysts, unless CARB has issued an Executive Order as to such part or system.

Further, Akrapovič parts or exhaust systems used or intended for use on "racing vehicles" (i.e. a competition vehicle used exclusively for competition on closed-course circuits) do not require an exemption or Executive Order from CARB to be sold in California. However, such parts are prohibited from use on California public highways or roads, even if occasionally used "off-road."







503132